



A wish for wellness...

Range Hood

Owners Manual

CONTENT

Notice	02
Installation	02
Notice of Installation	02
Safety Warning	03
Operation	04-05

 
1. NOTICE

- 1) Thank you for choosing our Cooker Hood. Please read the instruction manual carefully before use.
- 2) The installation work must be undertaken by a qualified and competent fitter.
- 3) The manufacture disclaims all liability for any damage or injury caused as a result of not following instructions for installation contained in the following text.

The Cooker Hood is used on 220~240V, 50Hz.


2. INSTALLATION

- 1) The Cooker Hood should be placed at a distance of 65~75cm (26~30inch) from the cooking surface for the best effect. See Pic 1.
- 2) Install the Hook on a suitable place once the installation height is fixed, and keep it in line. The fixed position of the inside chimney bracket is the place of chimney.
- 3) Put the Cooker Hood on the hook.

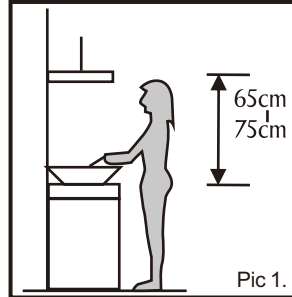

3. NOTICE OF INSTALLATION

 
- 1) Before installation, please ensure the area is clean to avoid suction of the remaining bits of broken wood and dust.
- 2) It cannot share the same air ventilation tube with other appliance such as gas tube, warmer tube, and hot wind tube.
- 3) The bending of ventilation tube should be $\geq 120^\circ\text{C}$, parallel or above the start point and should be connected to the external wall.
- 4) After installation, make sure that the extractor is level to avoid grease collection at one end.

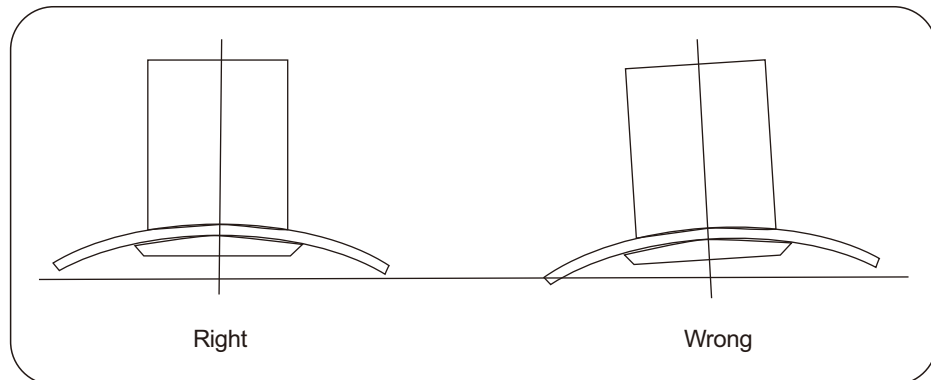

4. SAFETY WARNING

- ◇ Keep your children from using the Cooker Hood.
- ◇ Your Cooker Hood is for domestic use only, not suitable for barbecue, roast shop and other commercial use.
- ◇ Any installation work must be carried out by a qualified electrician or competent person.
- ◇ The Cook Hood and its filter should be cleaned regularly in order to keep in good working order.
- ◇ Before cleaning, always ensure that you have switched your Cooker hood off.
- ◇ If there is any fault with your Cooker Hood, please call the service department appointed by agent for servicing.
- ◇ Do not exhaust the gas from Cooker Hood through the same heated flue which is for the gas from gas hob and other kitchen appliances.
- ◇ Before installation and usage, read all the instructions and make sure that the voltage (V) indicated on your Cooker Hood are exactly the same as voltage (V) in your home.
- ◇ In order to get the most out of your Cooker Hood, please read the instruction manual before installing & using, and keep it in a safe place.

 5. OPERATION

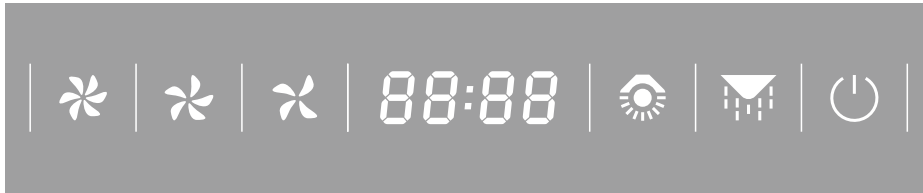

1). **Switch:** the icon is “  ”.

Once electrified, all lights ON then OFF 2 SEC later with a beep, then enters into shutdown state.


Touch this button, all lights ON and enter into Standby state, waiting for further operation.

Touch this button again, power OFF and all lights ON.

Delay Shutdown: touch the button when the fan is running, then enter into 1 MIN Delay.

Touch again, then power OFF.

After Delay, enter into Power OFF state, all lights OFF.

2). **Light:** the icon is “  ”.

Touch the button in any state, light ON or OFF.

3). **Gear +:** the icon is “  ”.

Touch this button in Standby state, the fan into the fast running state; touch this button again, return to Standby, then the fan stops running.

In slow speed state, press (+) to the medium-speed, press it again to the fast speed; press again to return to Standby, then the fan stops running.


When in the condition of time setting, this button is used as the time adjusting (+) button.

4). **Gear -:** the icon is “  ”.

Touch this button in Standby state, the fan into slow running state; touch this button again, return to Standby, then the fan stops running.

In fast speed state, press (-) to the medium-speed, press it again to the slow speed; press again to return to Standby, then the fan stops running.

When in the condition of time setting, this button is for time adjusting (-).

5). **Time Setting:** the icon is “  ”.

In Standby state, press this button for 2 SEC, enter into Hour Adjusting state; touch this button again to set minutes; touch this button again to exit time setting.

6). **Degreasing:** the icon is “  ”.

In Standby state, press the button for 2 SEC to the state of heat clean, the heating sheet heats 10 MIN, then the fan runs in fast speed for 1 MIN and stops.

Press the button for 2 SEC again to back to Standby. All other buttons in the heat clean state are invalid.