



A wish for wellness...

**USER MANUAL**  
**Mini Multi-cooker:0104**



[www.hitechappliances.net](http://www.hitechappliances.net)

Dear users:

Thank you for purchasing the rice cooker , in order to make you the proper use and maintenance of the rice cooker, please read the instructions carefully before use, and properly kept for future reference.

All content in this manual is only for use and maintenance of user reference, the picture is for reference only, the specific kind prevail.

If you still have problems in use, please consult customer service center of the company or distributor, we will provide you with satisfactory service in time.

## Safety precautions

- Please read the instruction manual carefully before using, and save it properly.
- This product is only used for family.
- Rated current must be used with more than 10 A with ground socket, plug in to pay attention to tight. Do not use the multi-purpose socket used with other electrical appliances.
- When plug the socket, make sure is tight, or the components will be burned, as bad contact cause it too heat.
- Don't use wet hand use plug, in order to avoid electric shock, do not put power cord plug jack when don't use.
- Don't put the product in the children can contact with the local, or kids to use alone, in order to avoid electric shock or burns.
- Prohibited put the insert scrap metal, iron wire, needles and foreign body into inside the product or crack, otherwise it will cause electric shock or abnormal work
- Do not use the product in instability and close to the place of water/fire/ walls/ furniture, direct sunlight, oil splash;
- This product is not applicable to the following: sensory or mental impairment, and lack of relevant experience or knowledge (including children) and so on. Unless they are in the professional under the supervision of the use of the product. Should take care of children, to ensure that they do not play this product.
- Make sure the power cord with sharp edges, burrs, and other prominent sharp objects or hot items contact surface, which may cause leakage, electric shock or fire.
- Used for the first time there may be a few minutes smell, belongs to the normal phenomenon.
- Only the original inner pot can be used, other inner pot can't replace, avoiding any trouble and danger.
- Don't start to open when you don't put inner pot body or inner pot is empty.
- Don't put inner pot not on other heating on the stove, otherwise easy to deformation.
- Don't put anything including water food on the body, when inner pot hasn't been put
- Don't move inner pot when ricer cooker is working..
- Please check if anything stick on the heating plate and bottom of inner pot before using. if has, you must clean it. Otherwise it will burn out heating plate with pot components due to poor contact
- After putting the inner pot into body, please turn around in order to make sure there is close between inner pot and heating plate.
- Inner pot if there is any breakage, please do not continue to use,, you should send to "repair service center" to buy the new one.

- Don't soak body into water, also don't make into body.
- If produce is out of order, please switch off the power first, And the pull out the plug from the socket, please don't unset the product, and contact our "repair service center" , don' t replace the parts which is not the origin, and don't repair by yourself.


Parts name of product

|             |           |       |               |         |        |
|-------------|-----------|-------|---------------|---------|--------|
| Rice cooker | Inner pot | spoon | Measuring Cup | Steamer | manual |
| 1           | 1         | 1     | 1             | 1       | 1      |

Specification table of product

|       |           |       |          |              |                 |
|-------|-----------|-------|----------|--------------|-----------------|
| Model | Voltage   | Power | Capacity | Rice ( cup ) | Suitable people |
| YC09T | 220V~50Hz | 180W  | 0.9L     | 1-3          | 1-3             |

Operation interface

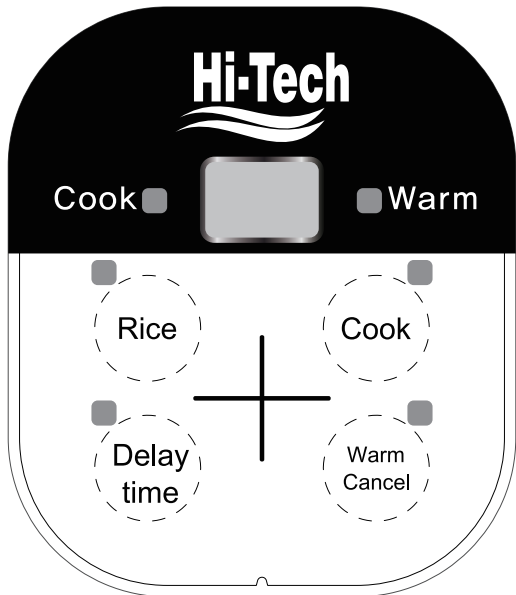

White rice : press " rice" key , choose the white rice function and the corresponding light is lit up , it would be enter into cooking state after 5 second.

Cook : press "Brown rice" key , choose the brown rice function and the corresponding light is lit up , it would be enter into cooking state after 5 second.

Delay time : choose the "White rice" or "Brown rice" function , and press the "Delay time " key , enter into adjust time state , Preset time is the finish time for the program , after finish choose , it would be enter into cooking state after 5 second.

Set up the delay time , press the "Delay time " key , enter into adjust time state :

--press the "Delay time " key, adjust the suitable time.

--adjust the longest preset time is 24 hours

--If the preset time is less than the cooking time, electric pressure cooker would not enter the preset function, the function will be directly to work which the same like without preset.

-- To prevent food for a long time of soaking in the water produce peculiar smell, make an preset time had better not exceed 12 hours

--after finish set up , it would be enter into cooking state after 5 second.

Warm/cancel :

■ On the standby state , press "Keep warm" key , enter into keep warm state , it would be enter to keep warm, the corresponding light is lit up, and the screen show the keep warm time. The longest time of keep warm is 12 hours. After finish the keep warm, it would be auto enter into standby state.

■ On the cooking state, press "Cancel" key , it would be end of cooking and enter into standby state.

Before USE

■ Confirm the steam valve installed correctly, if begin cooking without installed the steam valve, there may be a liquid overflow.

■ Use measuring cup weighing the rice, wash that

--A measuring cup of rice about 80g

-- Cannot wash the rice in the inner pot directly.

■ the largest rice amount of 0.9L is 3 cups.

According the actual amount required rice, suggest the proportion of rice :water is 1:1.2, and can according the tick add water , For example, wash 2 cups of rice, and then put that into inner pot, add the water to the tick of "2" , Do not exceed the maximum amount of the proportion rice and water ( the proportion of water can be based on personal preferences and adjusted it by user )

-- Shall not exceed the highest water level of inner pot.

- Please check if anything stick on the heating plate and bottom of inner pot before using. if has, you must clean it , After putting the inner pot into body, please turn around in order to make sure there is close between inner pot and heating plate.

### Cooking time table for function

| Function          | Default cooking time | Optional time range | Remarks   |
|-------------------|----------------------|---------------------|---|
| Rice              | —                    | —                   | The largest amount of cooking time about 40 minutes |
| COOK (Brown rice) | —                    | —                   | The largest amount of cooking time about 55 minutes |

### Tips for functions

- Described cooking time in the above table, it would be according to the voltage, rice, water, water temperature, rice quality have slightly different. To prevent rice agglomeration; please turned loose rice after enter the keep warm state within 30 minutes
- When cooking, turn keep warm function with 15 minutes, the taste would be more better.

### Keep warm function

The product after completion of the work, auto turn into keep warm function, the insulation light is lit up  
 -- keep warm time is 12 hours for the longest time

the product in standby state, press "keep warm/cancel" button, into the keep warm function

## Cleanness and Maintenance

- Using hot water, detergent and sponge to clean inner pot, aluminum cover with protecting overflow. Don't use remover and steel wire ball
- If food sticker into inner pot, you can soak for a moment before cleaning.
- Do not wash the rice in the pot directly, should be in other container cleaning after put into pot, so as to avoid damage to inner pot.
- Use wet cloth to clean the housing ,inside of top lid, PCB board and the dry it, please don't use the corrosivity or abrasive material.
- If there is water on hot plate, please use dry cloth, if there have rice on it, please use wire ball or sand paper burnish drops.
- Sealing cover and steam valve, please cleaning it regularly , otherwise produce peculiar smell of the rice.
- When not in use for a long time, should pull out plug from the socket, and collected in a dry ventilated place.
- Power cord should be unplug when cleaning, and when the body is cold completely, you can clean it.

## Faults and processing methods

When used have abnormal phenomenon as following, and is not the machine malfunction, please check it in detail before send out maintenance department.

In addition to the repair technicians, strictly forbid disassembly and repair by user.

| Stoppage                                 | Reason                  | Methods of Solving              |
|--|-------------------------|---------------------------------|
| Indicator unlights                       | power doesn't switch on | Methods of Solving              |
|  | Power board damaged     | Send to 'Repair Service Centre" |
| Heating plate unheated                   | Power board damaged     | Send to 'Repair Service Centre" |
|  | Heating plate damaged   |                                 |
|  | Fuse damaged            |                                 |
| Indicator lights, heating plate unheated | Heating plate damaged   | Send to 'Repair Service Centre" |
|  | Power board damaged     |                                 |

|                  |  |  |
|------------------|--|--|
| Rice under -cook | The capacity of rice too less or too much            | Adjust the proportion of rice and water, range between the maximum and minimum scale line. |
|                  | The proportion of rice and water is wrong.           | Adjust the proportion of rice and water  |
|                  | Inner pot oblique                                    | Put in the pot is good, gently press down, make it back to normal                          |
|                  | A foreign body between the pot and the heating plate | Clear up the foreign body  |
|                  | Inner pot broken                                     | Contact the "Repair service centre" to buy the new inner pot.                              |
|                  | Power board damaged                                  | Send to 'Repair Service Centre"  |
|                  | Sensor damaged                                       | Send to 'Repair Service Centre"  |
| Rice Over cooked | Inner pot broken                                     | Contact the "Repair service centre" to buy the new inner pot.                              |
|                  | Inner pot oblique                                    | Put in the pot is good, gently press down, make it back to normal                          |
|                  | Power board damaged                                  | Send to 'Repair Service Centre"  |
|                  | Sensor damaged                                       | Send to 'Repair Service Centre"  |
| Overflow         | The capacity of rice too much                        | Adjust the proportion of rice and water  |
|                  | The proportion of rice and water is wrong.           | Reduce the amount of water   |
|                  | Choose wrong function                                | Choose the correct function  |

|                                 |                                  |  |
|---------------------------------|----------------------------------|--|
| Smell of plastic                | Normal condition                 | Rice cooker after using a few times, the smell will not  |
| Screen show :<br>E1, E2, E3, E4 | Power board or sensor<br>damaged | To pull the plug, rice cooker is still fail after cooling, contact the company customer service department |